

REMOTE CONTROL

POWER Turns TV power on or off.

runns i v power on or on

SUBTITLES Turns audio subtitles on or off.

SHORTCUTS

RED: Record while watching live TV or from the TV Guide.

GREEN: Opens the left Navigation Menu.

YELLOW: Takes you to your Recordings list.

BLUE: Opens the grid-style TV Guide.

NAVIGATION RING

Press on the ring to move up - down - left - right. Also for fast forward, rewind,

replay, restart & Catchup TV.

BACK Takes you back to the previous screen.

VOLUME Increase or decrease the TV volume.

MUTE Turns off the sound.

INPUT/SOURCE

Switches between input sources such as TV and other connected devices.

NUMBER KEYS Enter numbers to go directly to that channel.

INFORMATION Opens the show info screen.

VIRTUAL ASSISTANT Enables Google Assistant using voice commands.

SETTINGS Opens your device settings.

SELECT Used to confirm or to select, or to pause TV.

RALLY TV Opens the RallyTV App.

HOME Opens the Google Home Screen.

- CHANNEL

Go up & down channels while watching TV.