



APP GUIDE

FEATURES + REMOTE CONTROL

























Need help?
24/7 SUPPORT
support@rally.ca
416 360 3000
rally.ca

TV FEATURES



Different features and buttons will appear throughout the app, depending on what is available on a particular channel, program or series.

- | | | | |
|---|--------------------|---|------------------------------|
|  | SEARCH |  | RESTART |
|  | HOME |  | VOICE COMMAND |
|  | MENU |  | RECORD |
|  | TV GUIDE |  | RECORDINGS |
|  | CHANNELS |  | RECORDING PROTECTED |
|  | NEW EPISODE |  | AUDIO & SUBTITLES |
|  | BACK |  | INFORMATION |
|  | PLAY |  | PICTURE-IN-PICTURE |
|  | PAUSE |  | FULLSCREEN |
|  | LIVE TV |  | SETTINGS |
|  | REPLAY |  | PROFILE/ACCOUNT |

The availability of Replay and Catchup TV is at the discretion of the content providers and is not permitted on all channels or all types of programming. Buttons will only be visible where available.

PLAY

Play the selected program now.

EPISODES

Go to the episode list for program series.

WATCH

Watch the selected channel or program now.

RESTART

Restart the episode from the beginning.

RESUME

Continue watching a previously restarted program.

RECORD

Start recording or set a future recording.

MANAGE RECORDINGS

Edit episode or series recording options.

PROTECT RECORDINGS

Protect recordings from being deleted.

ADVANCED SEARCH FILTERS

Navigate to highlight buttons by genre, cast, director, press the select button to see matching titles.

 
Genre:



Cast:



Director:



Use **SEARCH** to find a word or name by typing or speaking a voice command.



LIVE TV

See what's currently airing right now.

CATCHUP TV

Go back in time to watch previously aired programs.

OTHER WAYS TO WATCH

See other channels where you can watch the same program.

 
SIMILAR TITLES

Suggestions of other programs you may enjoy based on the type of program selected.

MOST WATCHED & MOST POPULAR CATCHUP

See what's trending now or being re-watched across RallyTV that you might enjoy.

THE NAVIGATION MENU

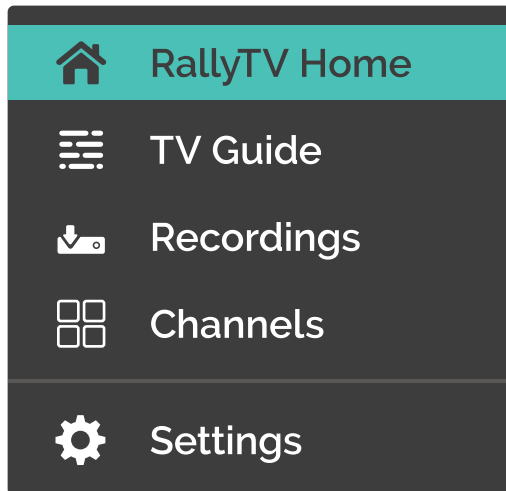

The Navigation Menu is the main control panel for your RallyTV experience.

When you login to the app, you'll start at the **HOME SCREEN** with the **NAVIGATION MENU** along the left-hand side of your screen.

USING THE APP

 
With RallyTV you can scroll in every direction, and **SELECT** buttons to flip through different pages. If you ever go too far, pressing the **BACK** button repeatedly will take you in reverse order until you get back to the beginning or pressing the **HOME** button will jump you directly to where you started.

NAVIGATING

The **NAVIGATION RING** on your remote control are the buttons that you'll used most often to get around.

When in the **TV GUIDE** you can press and hold to initiate fast scrolling In any direction.

If at any point you go too far, simply press and hold the **BACK** button to get back to the present time.

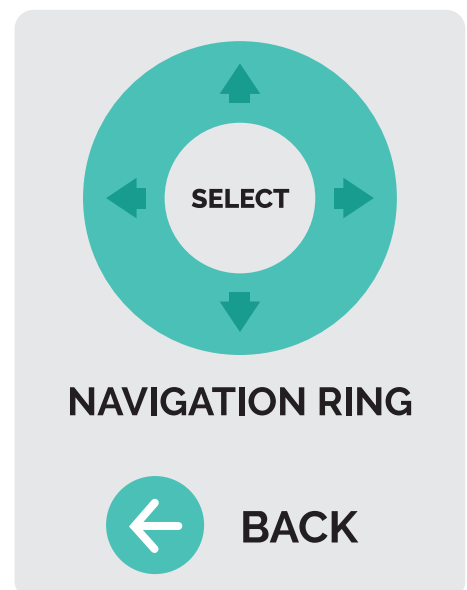

PLAY

EPISODES

 
RECORD

When a button is highlighted in **blue**, press the **SELECT** button to choose that option. Use the directional buttons (**UP**, **DOWN**, **LEFT** or **RIGHT**) to highlight a different button.

LAST CHANNEL WATCHED

On your TV streaming device, while you're watching a show, press the **SELECT** button once to bring up the video controls over the screen.


At the top, you'll see any channels you were previously watching. Press the **UP** button on your navigation wheel and then navigate **LEFT** and **RIGHT** to get to the one you want. Press **SELECT** again to return to the channel you want.

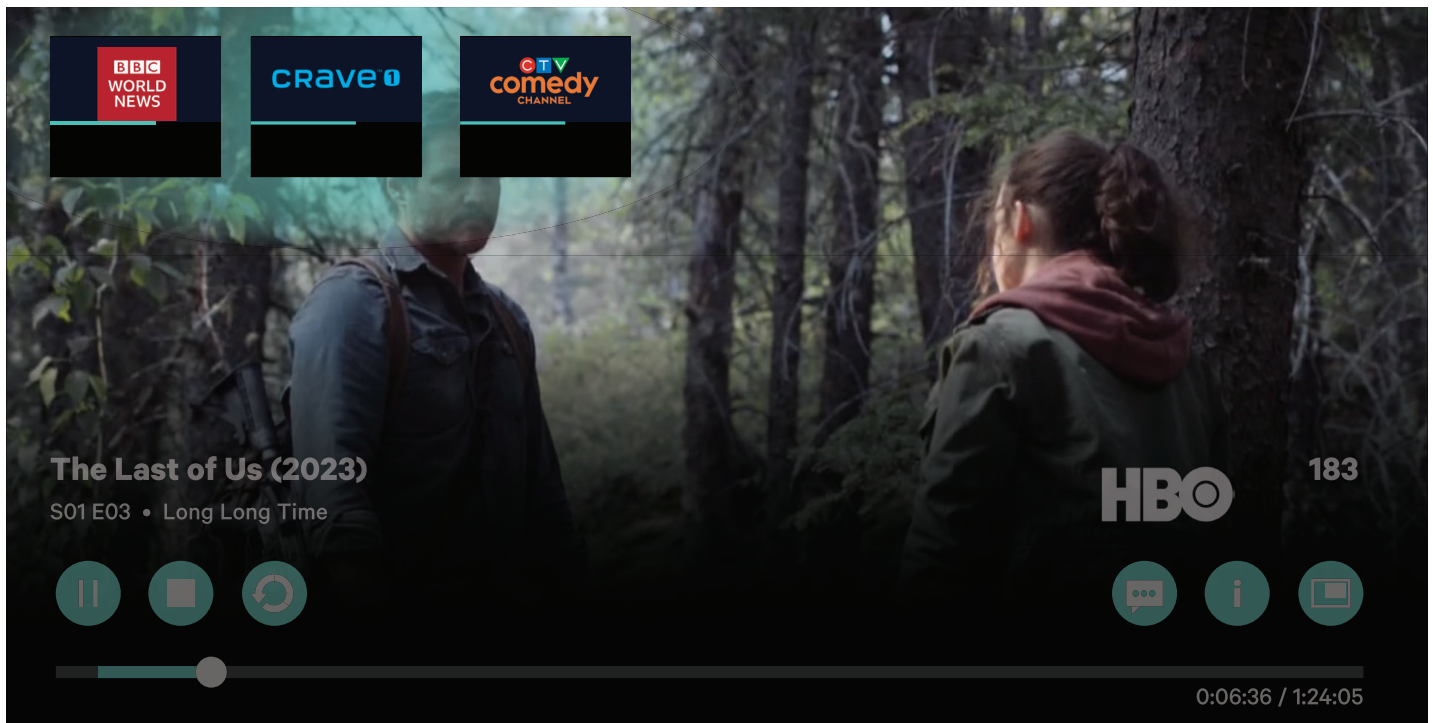

VIDEO CONTROLS

Press the **SELECT** button once to display the video controls over the screen.

Press the **DOWN** button to light up and move through the controls such as **PAUSE**, **RESTART** or move to the right to select **AUDIO & SUBTITLES** or get more **INFORMATION** about the program.

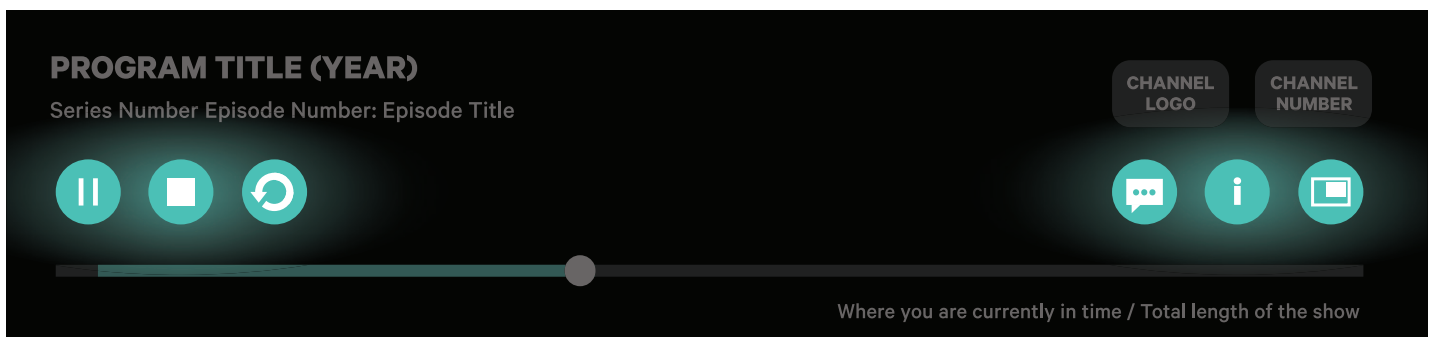


READING THE LIVE TV GUIDE

The vertical blue line will move to the right in real time, go **LEFT** or **RIGHT** to move through time to see what has played or is coming next.

Blue triangles in the upper left corner indicates if it is a **NEW** episode, rather than a rerun. Any scheduled recordings will also be shown as well as the availability of **RESTART** on that channel next to the channel logo.

 EXAMPLE: THURSDAY, OCTOBER 20, 12:20PM

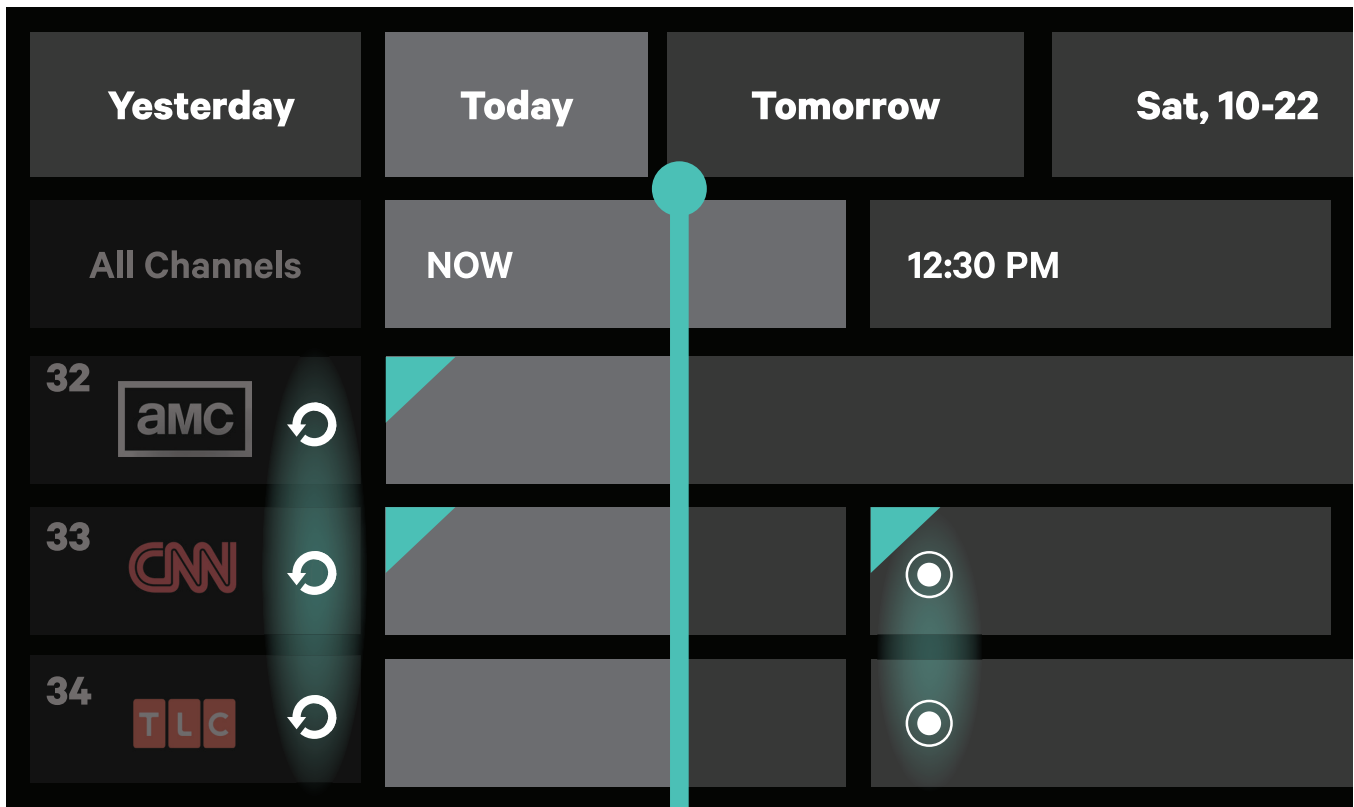

NEW EPISODE



ABLE TO RESTART



 
SET TO RECORD




CURRENT PLACE IN TIME

RECORDING A PROGRAM

Navigate to the program you wish to record, and **SELECT** it once it's highlighted.

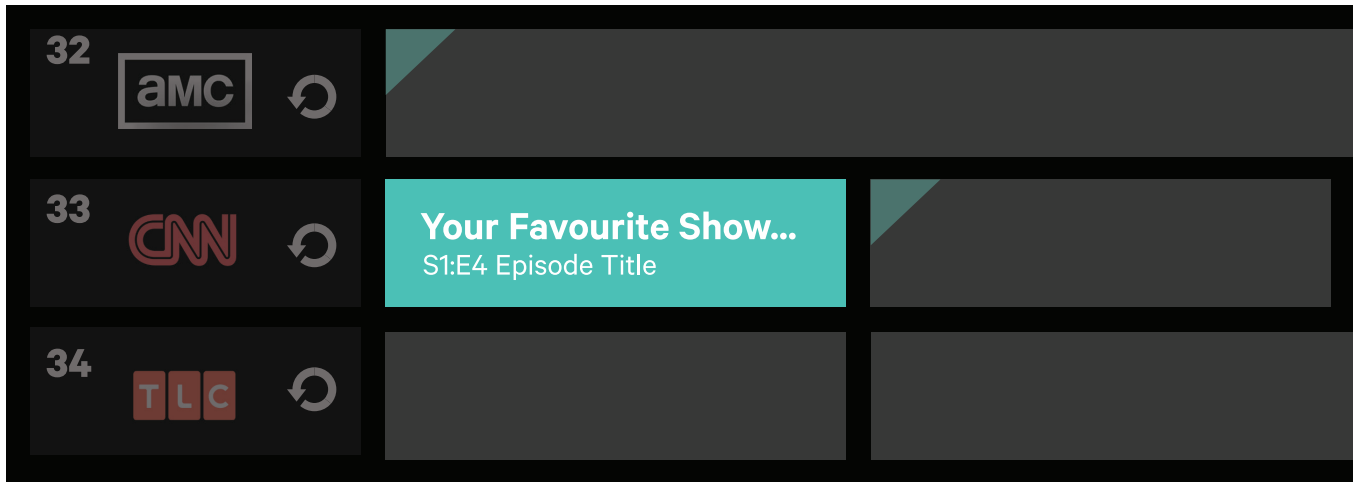

 You should see the info page of the program you selected. Make sure the **RECORD** button is highlighted, and click **SELECT**.

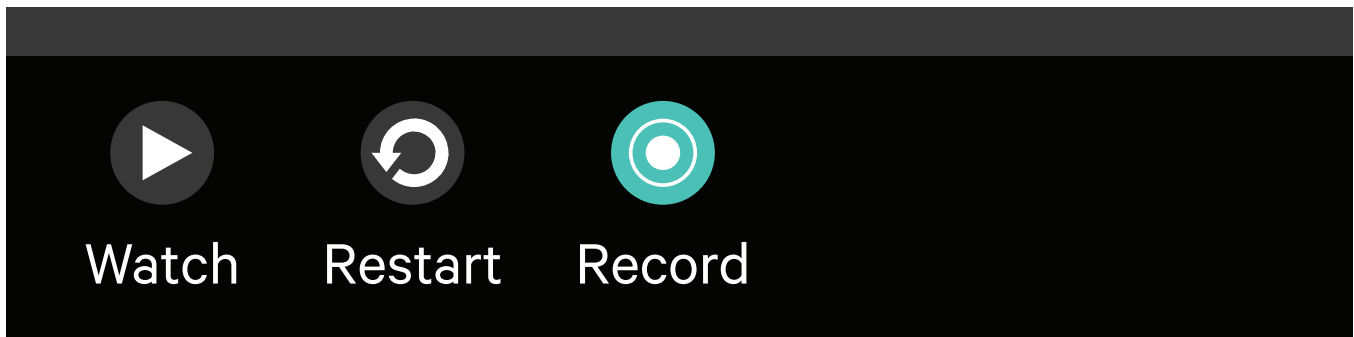

Going **BACK** to the LIVE TV Guide, you should now see the **RECORD** icon on the program you selected.





REMOTE CONTROL

